

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
REAR SUSPENSION					
1	GSA 130	ABSORBER ASSEMBLY--SHOCK--REAR	2		
2	LNZ 206	Nut	2		
3	AXE 647	Washer--special	2		
4	21A 1086	Mounting--upper (rubber)	2		
5	21A 1314	Mounting--lower (rubber)	2		
6	AXE 648	Washer--retaining	2		
7	21A 503	Ferrule	2		
7	21A 1230	Ferrule	2		
8	21A 504	Sleeve	2		
9	AJD 7162	Washer	4		
10	53K 1663	Nut	2		
11	21A 640	Buffer	1		
12	ACA 9099	Shaft--pivot	2		
13	FNZ 508	Nut	2		
14	LWZ 208	Washer--spring	2		
15	21A 1683	Strut	2		
16	2A 4342	Cone--spring	2		
17	21A 392	ARM ASSEMBLY--RADIUS--RH	1		
17	21A 393	ARM ASSEMBLY--RADIUS--LH	1		
18	2A 7351	Shaft--stub--RH	1		
18	2A 7364	Shaft--stub--LH	1		
19	2A 7352	Circlip	2		
20	13H 442	Bearing--needle roller	2		
21	AXE 649	Tube--lubricating	2		
22	21A 397	Bracket--hose	2		
23	51K 3274	Screw	4		
24	2A 7325	Bush--outer end	2		
25	21A 1163	JOINT ASSEMBLY--KNUCKLE	2		
26	21A 425	Cover--dust	2		
27	21A 423	Socket--ball	2		
	8G 7134	Kit--radius arm--rear	2		
28	ACA 9302	Washer--thrust--inner	2		
29	2A 7327	Ring--sealing	4		
30	2A 7324	Washer--thrust--outer	2		
31	LWZ 208	Washer--spring	2		
32	FNZ 508	Nut	2		
33	UHN 400	Lubricator	2		
34	21A 1277	HUB ASSEMBLY	2		1300
34	21A 2023	HUB ASSEMBLY	2		1000, 1001 & Minimatic
35	21A 1278	Stud--wheel	8		1300
35	21A 2064	Stud--wheel	8		1000, 1001 & Minimatic
36	AXE 209	Nut--wheel	8		1000, 1001 & 1300
36	88G 322	Nut--wheel	8		Minimatic
37	GHS 134	Seal--oil--hub	2		
38	GHB 147	Kit--bearing and spacer	2		1300
38	GHB 116	Kit--bearing and spacer--inner and outer	4		1000, 1001 & Minimatic
40	ATB 4098	Cap--grease retaining	2		
41	FNN 410	Nut--RH	1		
	FNN 2410	Nut--LH	1		
42	21A 1892	Washer--stub shaft	2		1300
42	BTA 672	Washer--stub shaft	2		1000, 1001 & Minimatic
44	14A 6615	Shroud--radius arm bracket--outer--RH	1		
44	14A 6616	Shroud--radius arm bracket--outer--LH	1		
45	PTZ 1004	Screw	4		
46	PWZ 203	Washer--plain	4		
	AXE 442	Gasket--rubber	2		1000, 1001 & 1300